




**X6** **60V** <sup>\*</sup> **||||** **BRUSHLESS** <sup>TM</sup>  
LITHIUM-ION

## CORDLESS LEAF BLOWER

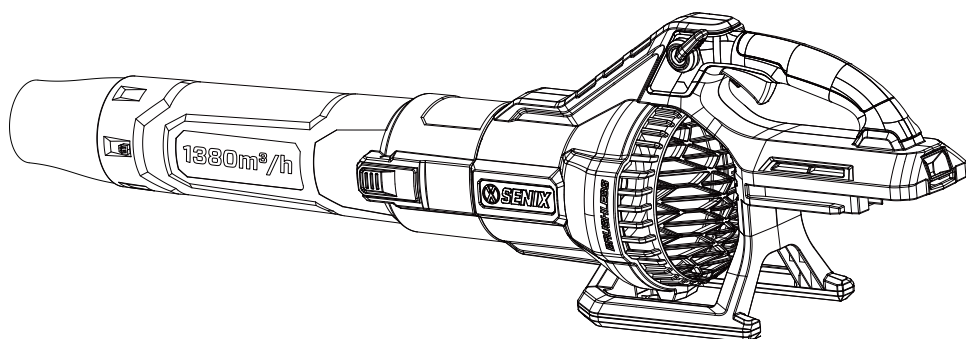

**CAUTION:** Before using this tool, please read this manual completely, and follow all operating safety measures.

- SAFETY
- ASSEMBLY
- OPERATION
- MAINTENANCE

**Senix Australia Pty Ltd.** 32/3 Westside Avenue, #Port Melbourne, Victoria, 3207  
For customer support, please call **1300 461 825** or email us at **info@senixtool.com**

# TABLE OF CONTENTS

SAFETY & INTERNATIONAL SYMBOLS.....	2
SAFETY INSTRUCTIONS.....	3
KNOW YOUR UNIT .....	7
SPECIFICATIONS .....	8
ASSEMBLY.....	8
OPERATION.....	10
MAINTENANCE.....	11
TROUBLESHOOTING.....	13

## SAFETY & INTERNATIONAL SYMBOLS

The following table depicts and describes safety symbols that may appear on this product. Read, understand and follow all instructions on the machine before attempting to assemble and operate.



Caution / Warning.



WARNING - To reduce the risk of injury, user must read instruction manual.



Wear eye protection.



Wear ear protection.



Wear eye and ear protection.



Do not expose the product to rain or wet conditions.



Wear protective, slip-resistant footwear.



Wear protective gloves.



Use appropriate protection for foot-leg and hand-arm.



Keep bystander away.



Class II equipment (Charger)



Power tools that are no longer usable and defective or used battery packs/batteries must be collected separately and disposed of in an environmentally correct manner.



The product complies with the applicable European directives and an evaluation method of conformity for these directives was done.



RCM Mark

# SAFETY INSTRUCTIONS

## ORIGINAL INSTRUCTIONS

### GENERAL POWER TOOL SAFETY WARNINGS



#### WARNING!

**Read all safety warnings, instructions, illustrations and specifications provided with this power tool.** Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

**Save all warnings and instructions for future reference.**

The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

#### 1) Work area safety

- a. **Keep work area clean and well lit.**  
*Cluttered or dark areas invite accidents.*
- b. **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** *Power tools create sparks which may ignite the dust or fumes.*
- c. **Keep children and bystanders away while operating a power tool.** *Distractions can cause you to lose control.*

#### 2) Electrical safety

- a. **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** *Unmodified plugs and matching outlets will reduce risk of electric shock.*
- b. **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.**  
*There is an increased risk of electric shock if your body is earthed or grounded.*
- c. **Do not expose power tools to rain or wet conditions.** *Water entering a power tool will increase the risk of electric shock.*
- d. **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** *Damaged or entangled cords increase the risk of electric shock.*
- e. **When operating a power tool outdoors, use an extension cord suitable for**

**outdoor use.** *Use of a cord suitable for outdoor use reduces the risk of electric shock.*

- f. **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** *Use of an RCD reduces the risk of electric shock.*
- #### 3) Personal safety
- a. **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** *A moment of inattention while operating power tools may result in serious personal injury.*
  - b. **Use personal protective equipment. Always wear eye protection.** *Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.*
  - c. **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** *Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.*
  - d. **Remove any adjusting key or wrench before turning the power tool on.** *A wrench or a key left attached to a rotating part of the power tool may result in personal injury.*
  - e. **Do not overreach. Keep proper footing and balance at all times.** *This enables better control of the power tool in unexpected situations.*
  - f. **Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts.** *Loose clothes, jewellery or long hair can be caught in moving parts.*
  - g. **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** *Use of dust collection can reduce dust-related hazards.*
  - h. **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** *A careless action can cause severe injury within a fraction of a second.*

#### 4) Power tool use and care

- a. **Do not force the power tool. Use the correct power tool for your application.**  
*The correct power tool will do the job better and safer at the rate for which it was designed.*
- b. **Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.**
- c. **Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools.** *Such preventive safety measures reduce the risk of starting the power tool accidentally.*
- d. **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.**  
*Power tools are dangerous in the hands of untrained users.*
- e. **Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.**

- f. **Keep cutting tools sharp and clean.**  
*Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.*
- g. **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** *Use of the power tool for operations different from those intended could result in a hazardous situation.*
- h. **Keep handles and grasping surfaces dry, clean and free from oil and grease.**  
*Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.*

#### 5) Battery Tool Use And Care

- a. **Recharge only with the charger specified by the manufacturer.** *A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.*
- b. **Use power tools only with specifically designated battery packs.** *Use of any other battery packs may create a risk of*

*injury and fire.*

- c. **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** *Shorting the battery terminals together may cause burns or a fire.*
- d. **Under abusive conditions, liquid may be ejected from the battery; avoid contact.** *If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.*
- e. **Do not use a battery pack or tool that is damaged or modified.** *Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.*
- f. **Do not expose a battery pack or tool to fire or excessive temperature.** *Exposure to fire or temperature above 130 °C may cause explosion.*
- g. **Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.** *Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.*

#### 6) Service

- a. **Have your power tool serviced by a qualified repair person using only identical replacement parts.** *This will ensure that the safety of the power tool is maintained.*
- b. **Never service damaged battery packs.** *Service of battery packs should only be performed by the manufacturer or authorized service providers.*



### WARNING!

Use only with SENIX X6 battery: B30X6/ B40X6/B60X6/B80X6/B120X6 And chargers: CHX6-L-EU/CHQX6-EU/CHQX6-M-EU/ CHDX6-M-EU.

## GARDEN BLOWER, GARDEN VACUUM AND GARDEN BLOWER/VACUUM SAFETY WARNINGS

In the safety warnings below, the term “machine” may be replaced by alternate wording (e.g. “garden blower”, “garden vacuum”, “garden blower/vacuum”, “leaf blower” or “leaf collector”).

- a. **Do not use the machine in bad weather conditions, especially when there is a risk of lightning.** *This decreases the risk of being struck by lightning.*
- b. **Check the debris collector frequently for wear or deterioration.** *A worn or damaged debris collector may increase the risk of personal injury.*  
NOTE 301 The warning in item b) above is omitted if the machine only operates as a garden blower.
- c. **Wear eye protection and ear protection.** *Adequate protective equipment will reduce the risk of personal injury.*  
NOTE 302 The ear protection portion of the warning in item c) above can be optionally omitted if the measured emission sound pressure level at the operator's ear in accordance with Annex I does not exceed 85 dB(A).
- d. **While operating the machine, always wear non-slip and protective footwear. Do not operate the machine when barefoot or wearing open sandals.** *This reduces the risk of injury to the feet.*
- e. **Do not wear loose fitting clothing or articles such as scarves, strings, chains, ties, etc., that could get drawn into the air inlets. Tie back or cover long hair to make sure it does not get drawn into the air inlets. If any of these items are drawn into the air inlets, it can increase the risk of personal injury.**
- f. **Keep bystanders away while operating the machine.** *Thrown debris can increase the risk of personal injury.*  
NOTE 303 The warning in item f) above is omitted for machines that can only be operated as a garden vacuum.
- g. **Do not use in vacuum mode without the debris collector in place.** *Thrown objects can increase the risk of personal injury.*  
NOTE 304 The warning in item g) above is omitted if the machine only operates as a garden blower.
- h. **Never point the blower nozzle in the direction of people or pets or in the direction of windows. Use extra caution when blowing debris near solid objects, such as trees, automobiles and walls that can cause debris to ricochet.** *Thrown*

*objects can damage property and increase the risk of personal injury.*

NOTE 305 The warning in item h) above is omitted for machines that can only be operated as a garden vacuum.

- i. **Do not use the machine to pick up or blow anything that is burning or smoking, such as cigarettes, matches or hot ashes.** *These ignition sources may increase the risk of fire.*  
NOTE 306 The words “pick up or” in item i) above are omitted for machines that can only operate as a garden blower. The words “or blow” in item i) above are omitted for machines that can only operate as a garden vacuum.
- j. **Do not vacuum water or other liquids or immerse any part of the machine in liquid.** *Water entering the machine may increase the risk of electric shock.*  
NOTE 307 The warning in item j) above is omitted if the machine only operates as a garden blower.
- k. **Do not vacuum stones, gravel, metal or broken glass.** *The fan wheel can get damaged and may increase the risk of personal injury.*  
NOTE 308 The warning in item k) above is omitted if the machine only operates as a garden blower.
- l. **Do not touch the fan while still in motion. Turn off the machine and wait until the fan stops before removing any part that may give access to the fan.** *This reduces the risk of injury from moving parts.*
- m. **When clearing jammed material or servicing the machine, make sure the power switch is off.** *Unexpected starting of the machine while clearing jammed material or servicing may result in serious personal injury.*

## VIBRATION + NOISE REDUCTION

To reduce the impact of noise and vibration emission, limit the time of operation, use lowvibration and low-noise operating modes as well as wear personal protective equipment.

Take the following points into account to minimise the vibration and noise exposure risks.

- Only use the product as intended by its design and these instructions.

- Ensure that the product is in good condition and well maintained.
- Use correct attachments for the product and ensure they are in good condition.
- Keep tight grip on the handles/grip surface.
- Maintain this product in accordance with these instructions and keep it well lubricated (where appropriate).
- Plan your work schedule to spread any high vibration tool use across a longer period of time.
- Prolonged use of the product exposes the user to vibrations that can cause a range of conditions collectively known as hand-arm vibration syndrome (HAVS) e.g. fingers going white; as well as specific diseases such as carpal tunnel syndrome.
  1. To reduce this risk when using the product, always wear protective gloves and keep your hands warm.
  2. The symptoms of HAVS include any combination of the following: Tingling and numbness in the fingers; Not being able to feel things properly; Loss of strength in the hands; Fingers going white (blanching) and becoming red and painful on recovery (particularly in the cold and wet, and probably only in the tips at first). Seek medical advice immediately if such symptoms are experienced.

## EMERGENCY

Familiarize yourself with the use of this product by means of this instruction manual. Memorize the safety directions and follow them to the letter. This will help to prevent risks and hazards.

1. Always be alert when using this product, so that you can recognize and handle risks early. Fast intervention can prevent serious injury and damage to property.
2. Switch off the product and remove the battery pack if there are malfunctions. Have the product checked by a qualified professional and repaired, if necessary, before you operate it again.

## RESIDUAL RISKS

Even if you are operating this product in accordance with all the safety requirements, potential risks of injury and damage remain. The following dangers can arise in connection with the structure and design of this product:

1. Health defects resulting from vibration emission if the product is being used over long periods of time or not adequately managed and properly maintained.
2. Injuries and damage to property due to broken attachments or the sudden impact of hidden objects during use.
3. Danger of injury and property damage caused by flying objects.
4. Prolonged use of this product expose the operator to vibrations and may produce 'whitefinger' disease. In order to reduce the risk, please wear gloves and keep your hands warm. If any of the 'whitefinger' symptoms appear, seek medical advice immediately. 'Whitefinger' symptoms include: numbness, loss of feeling, tingling, pricking, pain, loss of strength, changes in skin colour or condition. These symptoms normally appear in the fingers, hands or wrists. The risk increases at low temperatures.



## WARNING!


This product produces an electromagnetic field during operation! This field may under some circumstances interfere with active or passive medical implants! To reduce the risk of serious or fatal injury, we recommend persons with medical implants to consult their doctor and the medical implant manufacturer before operating this product!

## SAVE THIS INSTRUCTIONS

## INTENDED USE

The tool is intended for clearing hard surface, such as driveways and walkways, keeping decks and driveways free from leaves and pine needles.

## KNOW YOUR UNIT

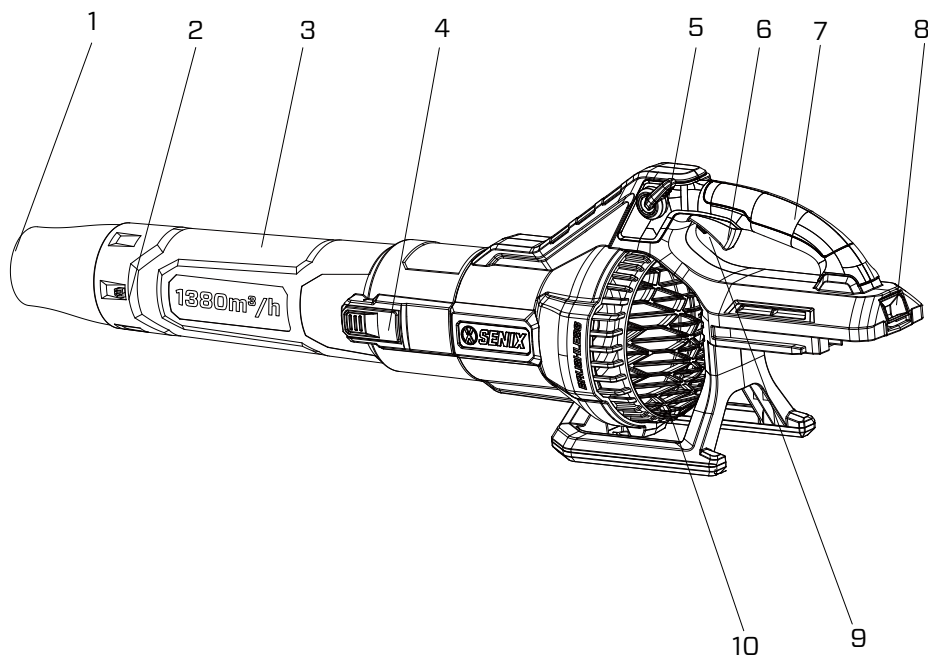

### APPLICATIONS

Model: BLAX6-M1-EU

As a blower:

Blowing leaves, garden waste such as grass, twigs and pine needles.

1	Blower nozzle
2	Nozzle-release button
3	Blower tube
4	Tube-release button
5	Speed/Lock-on dial
6	Air-speed trigger
7	Handle
8	Battery-release button
9	High-speed lock button
10	Intake hood

# SPECIFICATIONS

Model	BLAX6-M1-EU
Input Voltage	56V $\approx$ (60 V max*)
Rated Output Power	1 300 W
No-Load Speed	0 - 25 000 RPM (Max)
Maximum Air Speed	270 km/h
Maximum Air Volume	23 m <sup>3</sup> /min
Recommended Charging Temperature	4 °C-40 °C
Recommended Operating Temperature	-15 °C-40 °C
Recommended Storage Temperature	-20 °C-70 °C
Vibration level	Max. 3.375 m/s <sup>2</sup>
Measurement Uncertainty K	1.5 m/s <sup>2</sup>
Sound pressure value $L_{pA}$	88 dB(A)
Sound power value $L_{wA}$	102 dB(A)
Measurement Uncertainty $K_{pA}$ and $K_{wA}$	3 dB(A)
Weight (tool only)	2.5 kg

\*60V Max battery, maximum initial battery voltage (measured without a workload) is 60V. The nominal voltage is 56V.

## ASSEMBLY

1. Unpack all parts and lay them on a flat, stable surface:
2. Remove all packing materials and shipping devices, if applicable.
3. The scope of delivery varies depending on the country and purchased variant.

Model BLAX6-M1-EU

- Blower x1
  - Blower nozzle x1
  - Instruction manual x1
4. If you find that parts are missing or show damage do not use the product but contact your dealer. Using an incomplete or damaged product represents a hazard to people and property.
  5. Ensure that you have all the accessories and tools needed for assembly and operation. This also includes suitable personal protective equipment.



## WARNING!



Wear protective gloves for this assembly work and always lay the product on a flat and stable surface while assembling.



Follow the assembly instructions step-by-step and use the pictures provided as a visual guide to easily assemble the product!  
Do not insert the battery pack before the power tool is completely assembled or adjusted!

## INSTALLING/REMOVING THE BLOWER TUBE



## WARNING!

To avoid serious personal injury and damage to the unit, shut the unit off before removing or installing an attachment.

1. Align the groove in the tube with the knob on the blower housing. Push the tube onto the blower housing until the latch snaps into place.

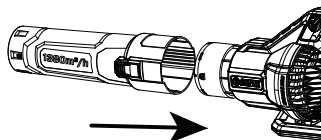


Fig. 1



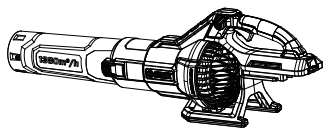


Fig. 2

2. To remove the tube, press and hold the tube-release button to disengage the latch, then pull the tube straight from the blower.

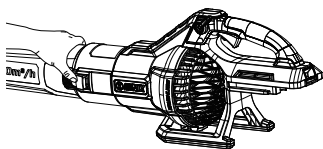


Fig. 3

## INSTALLING/REMOVING THE BLOWER NOZZLE

1. Align the groove in the blower nozzle with the knob on the tube. Push the nozzle onto the tube until it snaps into place.

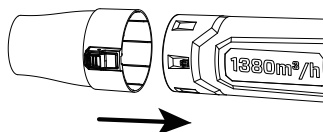


Fig. 4

 


Fig. 5

2. To remove the blower nozzle, press and hold the nozzle-release button to disengage the latch, then pull the nozzle straight from the blower.

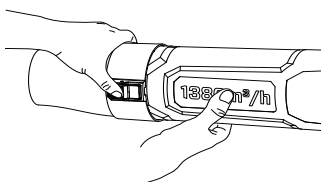


Fig. 6

## INSTALLING/REMOVING BATTERY PACK

### To install:

1. Align the ribs of the battery pack with the mounting slots in the blower's battery port.
2. Press the battery pack into the battery port until it snaps into position.

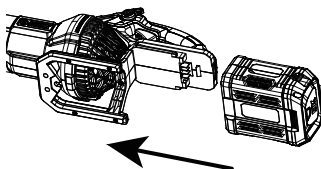


Fig. 7

### To remove:

1. Press the battery-release button. The battery pack will disengage from the latch and the ejection mechanism will assist with removal.
2. Remove the battery pack from the blower.

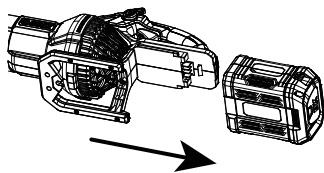


Fig. 8



### WARNING!

Always take care to note the location of your feet, children, or pets when pressing the battery-release button. Serious injury could result if the battery pack falls. NEVER remove the battery pack when in a high location.



### NOTE:

Refer to the manuals for the charger and battery pack for more details about how to charge the battery pack and other information regarding to the charger and battery pack.

## OPERATION



### WARNING!

Inspect the tool for complete installation. Anything missing, damaged, or misplaced parts may cause serious injury. Wear protective equipment at all times while operating the power tool.

## SWITCHING ON/OFF



### NOTE:

Before use, turn the speed lock-on dial counterclockwise to the off position.

### AIR-SPEED TRIGGER ONLY

1. Depress the air-speed trigger to turn on the blower.
2. The air speed of the blower is controlled with the variable speed trigger. More pressure on the trigger results in higher blowing speeds; less pressure on the trigger results in lower blowing speeds. Adjust the speed to suit the task at hand.
3. Release the air-speed trigger to turn off the blower.



### NOTE:

Press the trigger to the end (do not press the high-speed lock button) to temporarily increase the air speed to the maximum level. Then turn the speed/lock-on dial clockwise to the end, the maximum speed will be locked automatically. Press the high-speed lock button to exit the maximum airspeed.

### SPEED/LOCK-ON DIAL ONLY

The blower can be locked at any speed with the speed lock-on dial.

1. Turn the speed/lock-on dial clockwise to start the blower. The air speed will increase as the dial is rotated clockwise.
2. To decrease the air speed, turn the speed/lock-on dial counterclockwise.
3. Keep turning the speed/lock-on dial counterclockwise to the off position to stop the blower.



### NOTE:

Turn the speed/lock-on dial clockwise to the end, and the air speed will reach its maximum and lock automatically. Then press the high-speed lock button to exit the maximum airspeed.

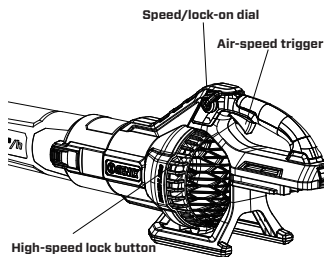


Fig. 9

## GENERAL

1. Double check that accessories or application tools are properly fixed.
2. Always hold the product by its handle. Keep the handle dry and clean to ensure safe support.
3. Ensure that the air vents are always unobstructed and clear. Clean them if necessary with a soft brush. Blocked air vents may lead to overheating and damage the product.
4. Switch the product off immediately if you are disturbed while working by other people entering the working area. Always let the product come to a complete stop before putting it down.
5. Do not direct the blower air stream toward any solid objects such as loose stones or fallen tree branches.
6. Before switching the product on, check whether it has been assembled correctly and all the moving parts are running smoothly!
7. While working, ensure that the product does not strike hard objects, as this can cause damage.
8. Do not blow any solid bodies such as stones, branches or other debris.
9. In dusty conditions using a misting attachment or other water source.

## WARNING!

Operation risks may occur, such as blown debris cutting skin, getting into the eyes or mouth, or being inhaled into the lungs. Always wear eye, respiratory, hearing, hand, foot, and body protection to reduce the risk of injury when operating this unit.

## BLOWING

1. Before blowing, loosen leaves that are stuck to the ground using a broom or rake.
2. Hold the tube approximately 10cm above the ground and walk slowly forward using a sweeping motion from side to side.
3. Direct the air stream away from yourself.
4. Ensure that you do not stir up any heavy objects at the risk of harming others or damaging your surroundings.

## WARNING!

Immediately power off the blower in the event of any abnormal vibrations. Abnormal vibration often shows a mechanical problem and continuous use could result in injury or property damage.

## MAINTENANCE

## WARNING!

Always switch the blower off, remove the battery pack, and let the product cool down before performing cleaning and maintenance work!

Always wear eye, respiratory, hearing, hand, foot, and body protection to reduce the risk of injury when operating this unit.

Only perform cleaning and maintenance work according to these instructions! Any additional maintenance or repairs must be performed by a qualified specialist using genuine replacement parts.

## CLEANING

- Switch the product off, remove the battery pack from the product.
- Clear off debris from blower tube.
- Remove wood chips and other debris from air vents.
- Use a small brush to clean the outside of the unit. Do not use strong detergents. Household cleaners that contain aromatic oils such as pine and lemon, and solvents such as kerosene, can damage plastic.
- Wipe off any moisture with a soft cloth. The tool should never come in contact with water.

## TRANSPORTATION

- Clean the product as described above.
- Always carry the product by its handle.
- Protect the product from any heavy impact or strong vibrations which may occur during transportation in vehicles.
- Secure the product to prevent it from slipping or falling over, becoming damaged, or falling over and causing damage or injury.

## STORAGE

- Clean the product as described above.
- Store the product and its accessories in a dark, dry, frost-free, well-ventilated place.
- Always store the product in a place that is inaccessible to children.
- We recommend using the original package for storage or covering the product with a suitable cloth or enclosure to protect it against dust.



### NOTE:

To prolong battery life, never store battery pack in a completely discharged condition. Make sure the battery pack is charged every six months or when the LED indicator shows only one light.

## DISPOSAL

When this product is no longer usable, do not dispose of it with household waste. It must be recycled at a proper facility.



Electrical products should not be discarded with household products. Used electrical products must be collected separately and disposed of at collection points provided for this purpose. Talk with your local authorities or dealer for advice on recycling.

## TROUBLESHOOTING

Suspected malfunctions are often due to causes that the users can fix themselves. Therefore, check the product using this section. In most cases the problem can be solved quickly.

Problem	Possible Cause	Solution
Product does not start	Battery pack not properly attached	Remove from product and reattach
	Battery pack capacity too low	Remove and charge battery pack
	Battery pack damaged	Inspection by a specialist electrician
	Air-speed trigger not set on start position	Refer to chapter "SWITCHING ON/OFF"
Product does not reach full power	Battery pack capacity too low	Charge battery pack
	Air vents are blocked	Clean the air vents
Vibration or noise is excessive	Bolts/nuts are loose	Tighten bolts/nuts
Product suddenly stops	Battery pack capacity too low	Remove and recharge battery pack
	Battery too hot	Remove battery pack and let it cool down