



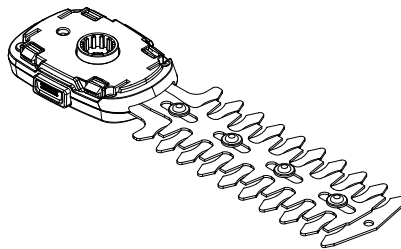

**7.2V\***   
LITHIUM-ION

## 2-IN-1 CORDLESS GRASS SHEAR & HEDGE TRIMMER

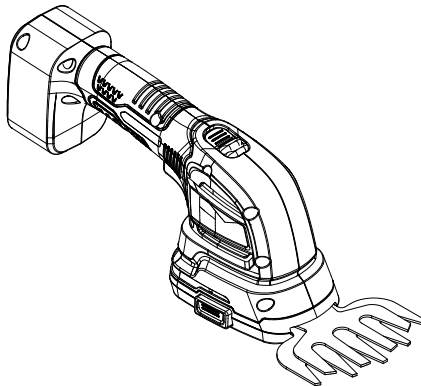

**CAUTION:** Before using this tool, please read this manual completely, and follow all operating safety measures.

- SAFETY
- ASSEMBLY
- OPERATION
- MAINTENANCE
- WARRANTY

**YAT USA INC.** 10506 Bryton Corporate Center Dr, #500 Huntersville, NC 28078

For customer support, please call 1-800-261-3981 or email us at [senix.support@yatusa.com](mailto:senix.support@yatusa.com)

# TABLE OF CONTENTS

SAFETY & INTERNATIONAL SYMBOLS.....	2
SAFETY INSTRUCTIONS.....	3
KNOW YOUR UNIT .....	7
SPECIFICATIONS .....	8
ASSEMBLY.....	8
OPERATION.....	9
MAINTENANCE.....	12
TROUBLESHOOTING.....	14
WARRANTY.....	15

## SAFETY & INTERNATIONAL SYMBOLS

The following table depicts and describes Safety and International symbols and pictographs that may appear on this product. Read, understand, and follow all instructions on the machine and in the instruction manual for complete safety, assembly, operating, maintenance, and repair information before attempting to assemble and operate.



Caution / Warning.



To reduce the risk of injury, user must read instruction manual.



Wear eye protection.



Wear hearing protection.



Wear a dust mask.



Wear eye and head protection.



Wear protective gloves.



Wear sturdy, non-slip footwear.



**DANGER** – Keep hands away from blade.



 
Do not use in rain or wet conditions.



Keep hands away from blade.



Warning: cutting means continues to run after the motor is switched off.



Keep sufficient distance from electrical power lines.



**WARNING** – Disconnect battery before maintenance.



Keep bystanders a safe distance away from the work area.



Electrical products should not be discarded with household products. Used electrical products must be collected separately and disposed of at collection points provided for this purpose. Talk with your local authorities or dealer for advice on recycling.

# SAFETY INSTRUCTIONS

## GENERAL POWER TOOL SAFETY WARNINGS



### WARNING!

**Read all safety warnings, instructions, illustrations and specifications, provided with this power tool.** Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

**Save all warnings and instructions for future reference.**

The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

#### 1. Work Area Safety

- a. **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- b. **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- c. **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

#### 2. Electrical Safety

- a. **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- b. **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- c. **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d. **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- e. **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric

shock.

- f. **If operating a power tool in a damp location is unavoidable, use a ground fault circuit interrupter (GFCI) protected supply.** Use of a GFCI reduces the risk of electric shock.
- #### 3. Personal Safety
- a. **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
  - b. **Use personal protective equipment. Always wear eye protection.** Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.
  - c. **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.
  - d. **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
  - e. **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
  - f. **Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewelry or long hair can be caught in moving parts.
  - g. **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.
  - h. **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** A careless action can cause severe injury within a fraction of a second.
- #### 4. Power Tool Use and Care
- a. **Do not force the power tool. Use the**

- correct power tool for your application.**  
*The correct power tool will do the job better and safer at the rate for which it was designed.*
- b. **Do not use the power tool if the switch does not turn it on and off.** *Any power tool that cannot be controlled with the switch is dangerous and must be repaired.*
  - c. **Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools.** *Such preventive safety measures reduce the risk of starting the power tool accidentally.*
  - d. **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** *Power tools are dangerous in the hands of untrained users.*
  - e. **Maintain power tools and accessories.** **Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** *Many accidents are caused by poorly maintained power tools.*
  - f. **Keep cutting tools sharp and clean.** *Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.*
  - g. **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** *Use of the power tool for operations different from those intended could result in a hazardous situation.*
  - h. **Keep handles and grasping surfaces dry, clean and free from oil and grease.** *Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.*
- 5. Battery Tool Use and Care**
- a. **Recharge only with the charger specified by the manufacturer.** *A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.*
  - b. **Use power tools only with specifically designated battery packs.** *Use of any other battery packs may create a risk of injury and fire.*
  - c. **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** *Shorting the battery terminals together may cause burns or a fire.*
  - d. **Under abusive conditions, liquid may be ejected from the battery; avoid contact.** *If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.*
  - e. **Do not use a battery pack or tool that is damaged or modified.** *Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.*
  - f. **Do not expose a battery pack or tool to fire or excessive temperature.** *Exposure to fire or temperature above 265 °F (130 °C) may cause explosion.*
  - g. **Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.** *Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.*
- 6. Service**
- a. **Have your power tool serviced by a qualified repair person using only identical replacement parts.** *This will ensure that the safety of the power tool is maintained.*
  - b. **Never service damaged battery packs.** *Service of battery packs should only be performed by the manufacturer or authorized service providers.*

## SAFETY INSTRUCTIONS FOR GRASS SHEARS

### Grass shears safety warnings:

- 1. Do not use the grass shear in bad weather conditions, especially when there is a risk of lightning.** *This decreases the risk of being struck by lightning.*
- 2. Keep all power cords and cables away from cutting area.** *Power cords or cables may be hidden and can be accidentally cut by the blade.*
- 3. Wear ear protection.** *Adequate protective equipment will reduce the risk of hearing loss.*

4. **Hold the grass shear by insulated gripping surfaces only, because the blade may contact hidden wiring or its own cord.** *Blades contacting a "live" wire may make exposed metal parts of the grass shear "live" and could give the operator an electric shock.*
5. **Keep all parts of the body away from the blade. Do not remove cut material or hold material to be cut when blades are moving.** *Blades continue to move after the switch is turned off. A moment of inattention while operating the grass shear may result in serious personal injury.*
6. **When clearing jammed material or servicing the grass shear, make sure the power switch is off and the power cord is disconnected.** *Unexpected actuation of the grass shear while clearing jammed material or servicing may result in serious personal injury.*
7. **Carry the grass shear by the handle with the blade stopped and taking care not to operate the power switch.** *Proper carrying of the grass shear will decrease the risk of inadvertent starting and resultant personal injury from the blades.*
8. **When transporting or storing the grass shear, always use the blade cover.** *Proper handling of the grass shear will decrease the risk of personal injury from the blades.*

## SAFETY INSTRUCTIONS FOR HEDGE TRIMMERS

### Hedge Trimmer Safety Warnings:

1. **Keep all parts of the body away from the blade. Do not remove cut material or hold material to be cut when blades are moving.** *Blades continue to move after the switch is turned off. A moment of inattention while operating the hedge trimmer may result in serious personal injury.*
2. **Carry the hedge trimmer by the handle with the blade stopped and taking care not to operate any power switch.** *Proper carrying of the hedge trimmer will decrease the risk of inadvertent starting and resultant personal injury from the blades.*
3. **When transporting or storing the hedge trimmer, always fit the blade cover.** *Proper handling of the hedge trimmer will decrease the risk of personal injury from the blades.*
4. **When clearing jammed material or**

**servicing the unit, make sure all power switches are off and the power cord is disconnected.** *Unexpected actuation of the hedge trimmer while clearing jammed material or servicing may result in serious personal injury.*

5. **Hold the hedge trimmer by insulated gripping surfaces only, because the blade may contact hidden wiring or its own cord.** *Blades contacting a "live" wire may make exposed metal parts of the hedge trimmer "live" and could give the operator an electric shock.*
6. **Keep all power cords and cables away from cutting area.** *Power cords or cables may be hidden in hedges or bushes and can be accidentally cut by the blade.*
7. **Do not use the hedge trimmer in bad weather conditions, especially when there is a risk of lightning.** *This decreases the risk of being struck by lightning.*

## ADDITIONAL SAFETY INSTRUCTIONS FOR EXTENDED-REACH HEDGE TRIMMERS

### Extended-reach hedge trimmer safety warnings:

1. **To reduce the risk of electrocution, never use the extended-reach hedge trimmer near any electrical power lines.** *Contact with or use near power lines may cause serious injury or electric shock resulting in death.*
2. **Always use two hands when operating the extended-reach hedge trimmer.** *Hold the extendedreach hedge trimmer with both hands to avoid loss of control.*
3. **Always use head protection when operating the extended-reach hedge trimmer overhead.** *Falling debris can result in serious personal injury.*

## SAFETY INSTRUCTIONS FOR CHARGER

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given

supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. children shall not play with the appliance. cleaning and user maintenance shall not be made by children without supervision.


- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Children should be supervised to ensure that they do not play with the charger.
- Before using the charger, read all the instructions and cautionary markings on the charger and battery pack.
- Do not attempt to charge battery packs other than supplied. the charger and battery pack supplied with it are specifically designed to work together.
- Charge the battery pack indoors only as the charger is designed for indoor use only.
- Do not charge non-rechargeable batteries.
- Protect the charger against moisture and wet conditions. there is a danger of electric shock.
- Ensure proper ventilation when charging.
- Do not place any object on top of the charger as it could cause overheating. do not place the charger near any heat source.
- Do not use an extension cord unless it is absolutely necessary. the use of an improper extension cord could cause the risk of fire, electric shock or electrocution.
- Do not use the charger if it dropped or otherwise damaged in has been subjected to a heavy knock, any way. have the charger checked and repaired by an authorised service centre.
- Do not disassemble the charger. incorrect re-assembly may result in the risk of fire, electric shock or electrocution.
- Disconnect the charger from the power supply before attempting to clean it to reduce the risk of an electric shock. removing the battery pack alone does not reduce the risk.

## INTENDED USE

This cordless grass shear/ hedge trimmer is designed exclusively for trimming grass, hedges and shrubs in residential garden settings. It must never be used for any other purposes.

## SAVE THESE INSTRUCTIONS

# KNOW YOUR UNIT

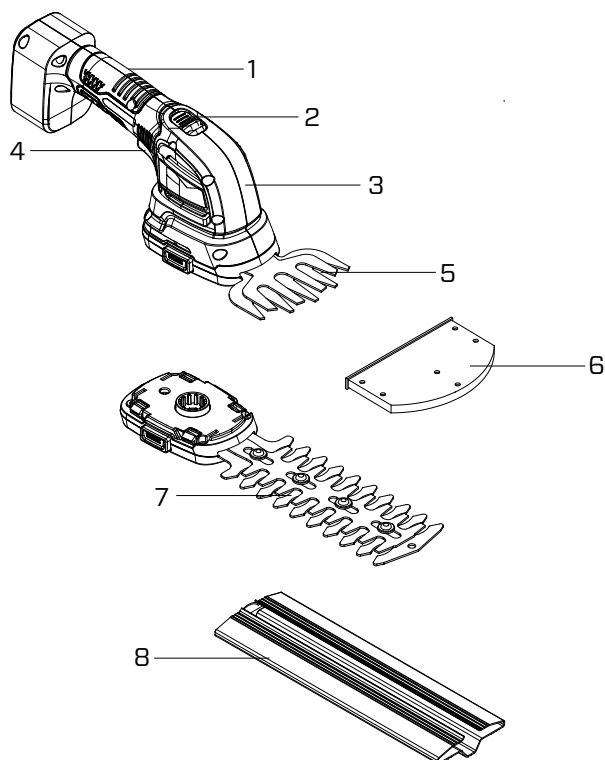

## APPLICATIONS

Model: GSS2-L

As a grass shear/hedge trimmer:  
trimming hedges, shrubs and grass in  
domestic garden.

1	Handle
2	Safety lock-off button
3	Motor housing
4	ON/OFF trigger

5	Grass shear blade attachment
6	Grass shear blade sheath
7	Hedge trimmer blade attachment
8	Hedge trimmer blade sheath

## SPECIFICATIONS

Model	GSS2-L
Power Source	Lithium-ion
Battery Voltage	7.2 V
Battery Capacity	2000 mAh
No-Load Speed	1300 RPM
Cutting Width	Grass Shear: 3.8" Hedge Trimmer: 5.9"
Weight (Tool Only)	1.46 lbs
<b>Adapter</b>	
Rated Input	100-240 V, 50/60 Hz, 0.3 A
Rated Output	5.0 V, 2.0 A (Max)
Charging Time	200 min

## ASSEMBLY

1. Unpack all parts and lay them on a flat, stable surface:
2. Remove all packing materials and shipping devices, if applicable.
3. The scope of delivery varies depending on the country and purchased variant:
  - Grass Shear x1
  - Hedge Trimmer Blade Attachment x1
  - Hedge Trimmer Blade Sheath x1
  - Adapter x1
  - Instruction Manual x1
4. If you find that parts are missing or show damage, do not use the product and contact your dealer. Using an incomplete or damaged product represents a hazard to people and property.
5. Ensure that you have all the accessories and tools needed for assembly and operation. This also includes suitable personal protective equipment.

## ! WARNING!



Wear protective gloves for this assembly work and always lay the product on a flat and stable surface while assembling. Follow the assembly instructions step-by-step and use the pictures provided as a visual guide to easily assemble the product!

## INSTALLING/REMOVING THE BLADE ATTACHMENT



### ! WARNING!

Use only as described in this manual. Use only manufacturer's recommended attachments.



### ! WARNING!

Make sure the tool is switched off before installing/replacing the blade.

#### To install:

1. Carefully align the blade shaft with the shaft hole and press it into place.
2. You will hear a distinct click confirming the blade attachment is securely locked in place.

#### To remove:

1. Simultaneously press and hold both side lock buttons inward.
2. Carefully slide or pull the blade attachment straight out of the tool.

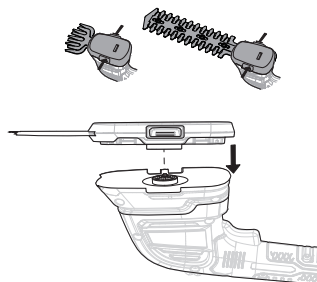


Fig. 1



## OPERATION



### WARNING!

Inspect the tool for complete installation. Operating with any missing or damaged parts or accessories can result in serious injury.



### WARNING!

Always wear eye, hearing, hand protection to reduce the risk of injury when operating the tool. Keep all parts of your body away from the blade attachment.



### WARNING!

Keep hands away from blades. Do not reach underneath work or around or over the blade while blade is moving. Do not attempt to remove cut material when blade is moving.



### WARNING!

The safe use of this product requires an understanding of the information on the tool and in this operator's manual, as well as knowledge of the project you are attempting. Before use of this product, familiarize yourself with all operating features and safety rules.

## GENERAL OPERATION TIPS

- Do not allow familiarity with this product to make you careless. Remember that a careless fraction of a second is sufficient to inflict serious injury.
- Always wear eye protection with side shields. Failure to do so could result in objects being thrown into your eyes and other possible serious injuries.
- To prevent accidental starting that could cause serious personal injury, always switch the tool off when assembling parts, making adjustments, cleaning, or when not in use.
- Do not use any attachments or accessories not recommended by the manufacturer. The use of attachments or accessories not recommended can result in serious personal injury.
- Check the product as well as accessories for damage before each use. Do not use the product if it is damaged or shows wear.
- Ensure that the air vents are always unobstructed and clear. Clean them if necessary with a soft brush. Blocked air vents may lead to overheating and damage the product.

- Always hold the product on its handles.
- Keep the handles dry and free from lubricant to ensure safe holding.
- Keep your body and feet in safety distance.
- Clear the area to be cut before each use. Remove all objects, such as cords, lights, wire, or string which can become entangled in the cutting blade and create a risk of serious personal injury.
- Run the machine to the top speed before cutting.
- Switch the product off immediately if you are disturbed while working by other people entering the working area. Always let the product come to complete stop before putting it down.
- Do not overwork yourself. Take regular breaks to ensure you can concentrate on the work and have full control over the product.
- Avoid trimming too much at one time or through the heavy shrubbery. This can cause the blades to bind and slow, reducing the cutting efficiency.
- The product is intended to be used by the operator at ground level and not on ladders or any other unstable support.

## SWITCHING ON/OFF



### WARNING!

Only start the tool when the blade attachment does not touch any objects.

1. To turn the tool on, push and hold the safety lock-off button with your thumb, then pull the ON/OFF trigger with your forefinger.
2. Once the tool starts, you can release the safety lock-off button and proceed with operation.
3. To turn the tool off, release the ON/OFF trigger.

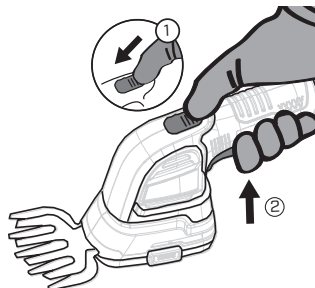


Fig. 2



## NOTE:

When powered ON, the 4-LED indicator glows green to show battery level. Recharge when  $\leq 1$  light remains.

## CUTTING TIPS



## WARNING!

Never cut near electric cords or lines. If blade jams on any electrical cord or line, DO NOT TOUCH THE BLADE! IT CAN BECOME ELECTRICALLY LIVE AND VERY DANGEROUS. Continue to hold the tool by the insulated rear handle or lay it down and away from you in a safe manner. Disconnect the electrical service to the damaged line or cord before attempting to free the blade from the line or cord. Contact with the blade, other conductive parts of the tool, or live electric cords or lines will cause serious personal injury.

- For shrubs or hedges require substantial cut, it's favorable to cut thicker branches beforehand by a hedge trimmer with larger cutting capacity. Then use the tool for further cut.
- To shape precisely, run a taught line between the extreme edges of the hedge and then trim along the length of the line.
- When trimming a extend lawn area, it's recommended to have it trimmed using a professional grass trimmer first. Then do minor betterment by the tool with grass shear blade attachment.

 
 


Fig. 3

### 1. Shaping

The hedge should be trimmed to achieve a trapezoidal form, it should widen toward the bottom at both sides. This improves the penetration of light to the lower extremities. A general guideline is approximately 3.9 inch

(10cm) slant for each 1 meter of hedge height.

### 2. Cutting Sequence

First cut both sides, starting at the bottom and working to the top. This prevents cuttings from falling into the area where you are still to work.

### 3. Trimming the top

Where the branches have grown extremely long, cut back the hedge in several stages. The shorter cuttings obtained are better suited for composting.

## EXTENSION ROD CONNECTION

1. Slide the grass shear's mounting base into the extension rod's locking mechanism until an audible click confirms the lock is securely engaged.
2. Insert the extension rod's power connector into the grass shear's matching port.

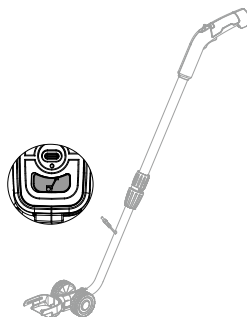


Fig. 4



## NOTE:

Extension rod is only for grass shear.

## CHARGING THE BATTERY



## NOTE:

Charge the battery at an ambient temperature range of 32°F - 104°F (0°C - 40°C).

The length of service between each charging varies depending on the type of work you are doing. The battery in this product has been designed to provide maximum trouble-free life. However, like all batteries, it will eventually wear out. To obtain the longest possible battery life, we suggest the following:

- Store and charge your grass shear in a cool area. Temperatures above or below normal room temperature will shorten battery life.
  - Recharge the tool immediately after it is discharged.
  - All batteries gradually lose their charge. The higher the temperature is, the faster they lose their charge. If you store your grass shear for long periods of time without using it, recharge the battery every 6 months. This will extend battery life.
1. Plug the AC adapter into a standard household power outlet
  2. Firmly insert the adapter's TYPE-C plug into the charging port.
  3. Observe the LED indicator (flashing green) to confirm charging has initiated.

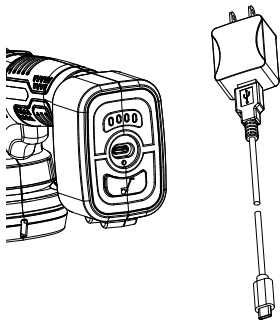


Fig. 5

CHARGING INDICATOR

The charging indicator indicates the charge status of the grass shear as shown below :

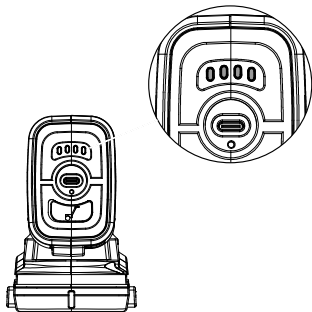


Fig. 6

Lights			Remaining Capacity
Lighted	Off	Blinking	
			75% - 100%
			50% - 75%
			25% - 50%
			5% - 25%
			< 5% (need to be charged)

OVERHEAT PROTECTION

When the tool/battery is overheated, the tool stops automatically. In this situation, let the power tool/battery cool before turning the tool on again.

OVERDISCHARGE PROTECTION

When the battery capacity is not enough, the tool stops automatically. In this case, charge the battery.

## MAINTENANCE



### WARNING!

Only perform cleaning and maintenance according to these instructions! Any additional work must be performed by an authorized service center.



### WARNING!

TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION: Make sure the tool is switched off before performing any procedure in this section.

TO PREVENT SERIOUS INJURY FROM TOOL FAILURE: Do not use damaged equipment. If abnormal noise or vibration occurs, have the problem corrected before further use. There are no user-serviceable parts in your power tool. If any of following conditions are found, stop using the tool and send it to an authorized service center for repair.

- Loose hardware
- Misalignment or binding of accessories
- Cracked or broken parts
- Any other condition that may affect its safe operation

## GENERAL MAINTENANCE

Always switch the product off and let the product cool down before performing inspection, maintenance and cleaning work.

1. Keep the ventilation vents of the tool clean at all times. If possible, prevent foreign matter from entering the vents.
2. If the enclosure of the trimmer requires cleaning, do not use solvents to clean it. Only use a moistened soft cloth. Never let any liquid get inside the tool; and never immerse any part of the tool into a liquid.
3. The blade rail should be cleaned and treated with light machine oil or spray lubricant after each use. When a job lasts for a long period of time, it is recommended that the blade rail also be treated with spray lubricant at regular intervals during operation.
4. Inspect the product before each use for worn and damaged parts. Do not operate it if you find broken and worn parts.

## BLADE MAINTENANCE

To ensure years of efficient and trouble-free operation, blade cleaning should be performed if sap and debris have built up, or if you live in an area where the soil is sandy. Cleaning unusually heavy deposits may require removal of the blades.

NOTE: senix will not be held responsible for any damage or injuries caused by repair of the trimmer by an unauthorized person or by mishandling of the trimmer.

1. Keep the cutting blades clean and free of debris. Remove trimmings.
2. Apply a small amount of suitable lubricant on the blades to retain a good cutting performance.

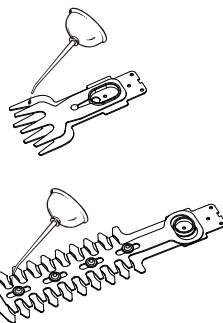


Fig. 7

3. Keep the blades sharp. Have a worn or damaged cutting device replaced with a new one of the same type by a qualified specialist.

## CLEANING

1. Clean dust and debris from air vents.
2. Keep the handle clean, dry, and free of oil or grease.
3. Remove stubborn dirt from housing with high-pressure air (max. 3 bar).
4. Never immerse your tool in liquid or allow a liquid to flow inside them.



### WARNING!

Do not use chemical, alkaline, abrasive, or other aggressive detergents or disinfectants to clean this product as they might be harmful to its surfaces.

## TRANSPORTATION

1. Only carry by its handle.
2. Protect from any heavy impact or strong vibrations which may occur during transportation in vehicles.
3. Secure to prevent it from slipping or falling over.

## STORAGE

1. Clean thoroughly as described above.
2. Store in a dark, dry, frost-free, and well-ventilated area that is inaccessible to children. The recommended storage temperature for tools is 50°F - 78.8°F (10°C ~ 26°C).
3. Use the original package for storage or cover it with a suitable cloth to protect it against dust.

## DISPOSAL

Waste products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice. Grasses or branches may be produced by the tool during operation. Users should clean up this debris to aid in protecting the environment.



Electrical products should not be discarded with household products. Used electrical products must be collected separately and disposed of at collection points provided for this purpose. Talk with your local authorities or dealer for advice on recycling.

## TROUBLESHOOTING

Suspected malfunctions are often due to causes that can be addressed by the user. Therefore, troubleshoot the product using this section. In most cases the problem can be solved quickly.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Product does not start.	Battery pack discharged.	Charge the battery.
	Battery pack damaged.	Contact an authorized service center.
	The product is too hot.	Allow the trimmer to cool.
	The blade is jammed.	Switch off the tool, remove the obstruction carefully.
Product does not reach full power.	Battery discharged.	Charge the battery.
	Air vents are blocked.	Clean the air vents.
Unsatisfactory result.	Damaged or worn blade.	Replace with a new one.
Excessive vibration or noise.	Dry or corroded blade.	Lubricate the blades, following the section "BLADE MAINTENANCE" in this manual.
	Blade is bent.	Replace with a new blade. Contact an authorized service center for blade replacement service.
	Bent or damaged teeth.	Replace with a new blade. Contact an authorized service center for blade replacement service.
	Loose blade bolts.	Tighten the blade bolts.

# WARRANTY

## SENIX TOOLS LIMITED WARRANTY

**FOR THREE YEARS** from the date of original purchase this product is warranted against defects in material or workmanship. WITH PROOF OF ORIGINAL PURCHASE a defective product will receive free repair. If the product cannot be repaired it will be replaced free of charge.

For details to obtain warranty coverage, visit [senixtools.com](http://senixtools.com), email [senix.support@yatusa.com](mailto:senix.support@yatusa.com) or call **1-800-261-3981**.

- This warranty does not cover repairs necessary due to product accident or abuse, or failure to operate or maintain the product according to all supplied instructions.
- This warranty does not cover expendable items that can wear out from normal use within the warranty period, including but not limited to drill bits, cutting blades and trimmer spool or line.
- This warranty does not apply to damage resulting from repairs to the product made or attempted by other than SENIX authorized agents.
- This warranty does not cover the cost of mailing or transporting the power tool to receive warranty coverage.
- The warranty is void if the product has been used for commercial, professional, or rental service purposes.
- The warranty applies to the original retail purchaser and is not transferable.
- Proof of purchase is required to obtain warranty coverage.

THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHERS, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND EXCLUDES ALL INCIDENTAL OR CONSEQUENTIAL DAMAGE.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so these limitations may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary in certain states or provinces.

**NOTE:** Battery pack warranty voided if the battery pack is tampered with in any way. SENIX is not responsible for any injury caused by tampering and may prosecute warranty fraud to the fullest extent permitted by law.

**60-DAY MONEY-BACK GUARANTEE.** If for any reason within 60 days from the date of original purchase you are not completely satisfied with the performance of this SENIX product, you can return it with the original sales receipt for a full refund.

**Latin America:** This warranty does not apply to products sold in Latin America. For products sold in Latin America, see the country-specific warranty information contained in the packaging, call the retailer from which it was purchased, or visit the website for warranty information.

**Free warning label replacement:** If your warning labels become illegible or are missing, call **1-800-261-3981** for a free replacement.

**REGISTER ONLINE** - [senixtools.com/pages/product-registration](http://senixtools.com/pages/product-registration)

Thank you for your purchase! Register your product now for:

**Warranty Service:** Registering your product will help you obtain more efficient warranty service in case of a problem with your product.

**Confirmation of Ownership:** In case of an insurance loss, such as fire, flood, or theft, your ownership registration will serve as proof of purchase.

**For your safety:** Registering your product will allow us to contact you in the unlikely event a safety notification is required under the Federal Consumer Safety Act.



**YAT USA INC.** 10506 Bryton Corporate Center Dr, #500 Huntersville, NC 28078  
For customer support, please call **1-800-261-3981** or email us at [senix.support@yatusa.com](mailto:senix.support@yatusa.com)

